



Preload Creation Methods

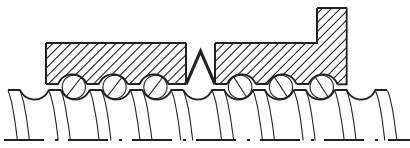

(25, 30 35)
(01, 10 15).


By axial displacement or turn of two semi-nuts opposite one another with fixing of their position followed. Herewith semi-nuts plant against compensation ring (OMB25, OMB30, and OMB35) or internal shoulder of special case (OMB01, OMB10, and OMB15).

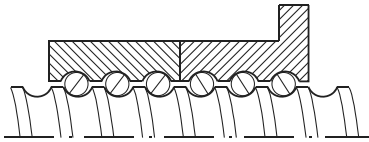

(25, 30


35).

By turn of two semi-nuts opposite one another with fixing of their position by special appliances followed (OMB25, OMB30, and OMB35).

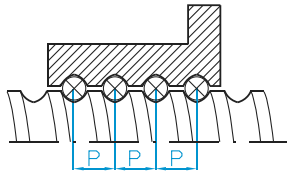

(40, 45).

By ball diameter selection (OMB40, OMB45).

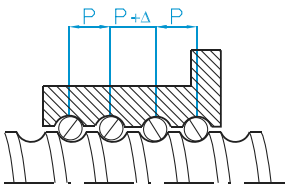

(50).

By displacement of nut turn on rated value and ball diameter selection (OMB50).